







Thule Rapid System Kit 1091

> Instructions

ACURA SLX, 5-dr SUV, *96-99
ISUZU Big Horn, 3-dr SUV, 93-97
ISUZU Big Horn, 5-dr SUV, 92-97
ISUZU Trooper, 3-dr SUV, 93-97
ISUZU Trooper, 5-dr SUV, 92-97 / *92-02
HOLDEN Jackaroo, 3-dr SUV, 93-97

HOLDEN Jackaroo, 5-dr SUV, 92-97
OPEL Monterey, 3-dr SUV, 93-97
OPEL Monterey, 5-dr SUV, 92-97
VAUXHALL Monterey, 3-dr SUV, 93-97
VAUXHALL Monterey, 5-dr SUV, 93-97
 *North America

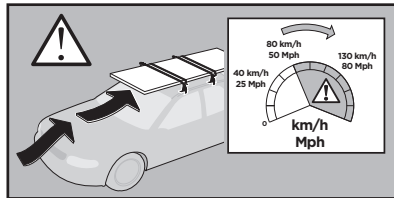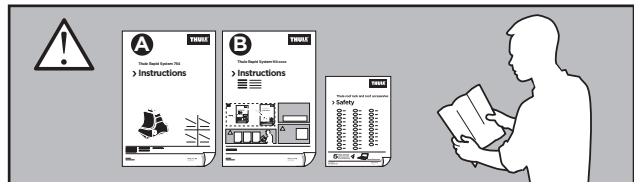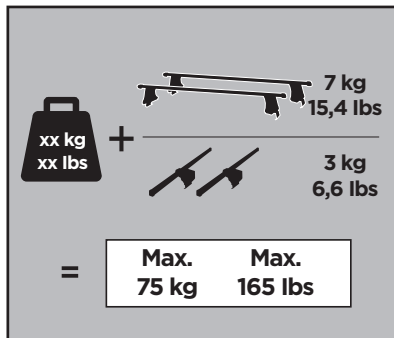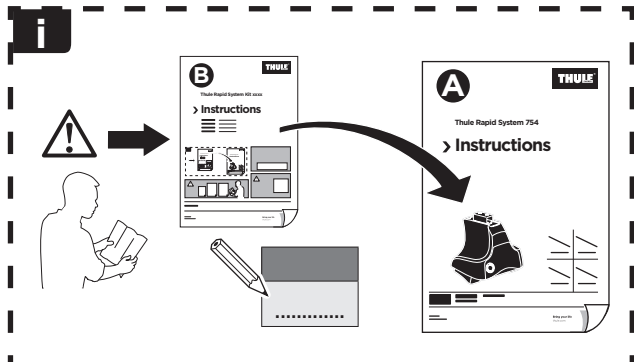

ISO 11154-E


141091

C.20150501
519-1091-03

Bring your life
thule.com



15 x4



186 x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
ACURA SLX , 5-dr SUV, *96-99	46	1111	43 ³ / ₄
ISUZU Big Horn , 3-dr SUV, 93-97	50	1151	45 ⁵ / ₈
ISUZU Big Horn , 5-dr SUV, 92-97	46	1111	43 ³ / ₄
ISUZU Trooper , 3-dr SUV, 93-97	50	1151	45 ⁵ / ₈
ISUZU Trooper , 5-dr SUV, 92-97 / *92-02	46	1111	43 ³ / ₄
HOLDEN Jackaroo , 3-dr SUV, 93-97	50	1151	45 ⁵ / ₈
HOLDEN Jackaroo , 5-dr SUV, 92-97	46	1111	43 ³ / ₄
OPEL Monterey , 3-dr SUV, 93-97	50	1151	45 ⁵ / ₈
OPEL Monterey , 5-dr SUV, 92-97	46	1111	43 ³ / ₄
VAUXHALL Monterey , 3-dr SUV, 93-97	50	1151	45 ⁵ / ₈
VAUXHALL Monterey , 5-dr SUV, 93-97	46	1111	43 ³ / ₄

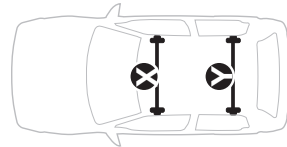
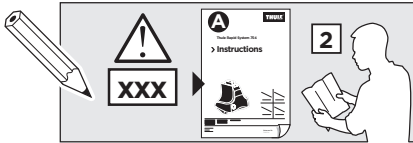


	Y (scale)	Y (mm)	Y (inch)
ACURA SLX , 5-dr SUV, *96-99	45	1101	43 ³ / ₈
ISUZU Big Horn , 3-dr SUV, 93-97	45,5	1106	43 ¹ / ₂
ISUZU Big Horn , 5-dr SUV, 92-97	45	1101	43 ³ / ₈
ISUZU Trooper , 3-dr SUV, 93-97	45,5	1106	43 ¹ / ₂
ISUZU Trooper , 5-dr SUV, 92-97 / *92-02	45	1101	43 ³ / ₈
HOLDEN Jackaroo , 3-dr SUV, 93-97	45,5	1106	43 ¹ / ₂
HOLDEN Jackaroo , 5-dr SUV, 92-97	45	1101	43 ³ / ₈
OPEL Monterey , 3-dr SUV, 93-97	45,5	1106	43 ¹ / ₂
OPEL Monterey , 5-dr SUV, 92-97	45	1101	43 ³ / ₈
VAUXHALL Monterey , 3-dr SUV, 93-97	45,5	1106	43 ¹ / ₂
VAUXHALL Monterey , 5-dr SUV, 93-97	45	1101	43 ³ / ₈

2



ISUZU Big Horn, 3-dr SUV, 93-97
ISUZU Trooper, 3-dr SUV, 93-97
HOLDEN Jackaroo, 3-dr SUV, 93-97
OPEL Monterey, 3-dr SUV, 93-97
VAUXHALL Monterey, 3-dr SUV, 93-97

SRA

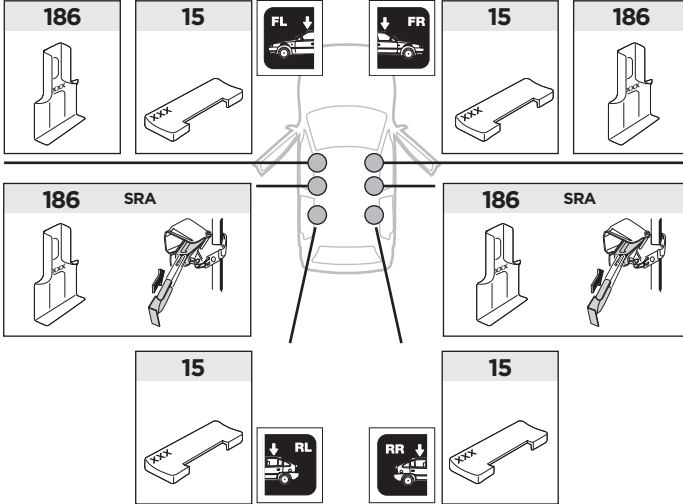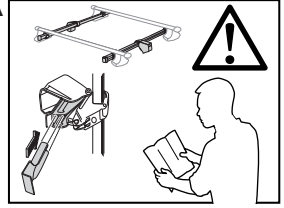


ACURA SLX, 5-dr SUV, *96-99
ISUZU Big Horn, 5-dr SUV, 92-97
ISUZU Trooper, 5-dr SUV, 92-97 / *92-02


HOLDEN Jackaroo, 5-dr SUV, 92-97
OPEL Monterey, 5-dr SUV, 92-97
VAUXHALL Monterey, 5-dr SUV, 93-97

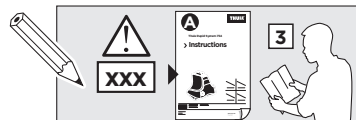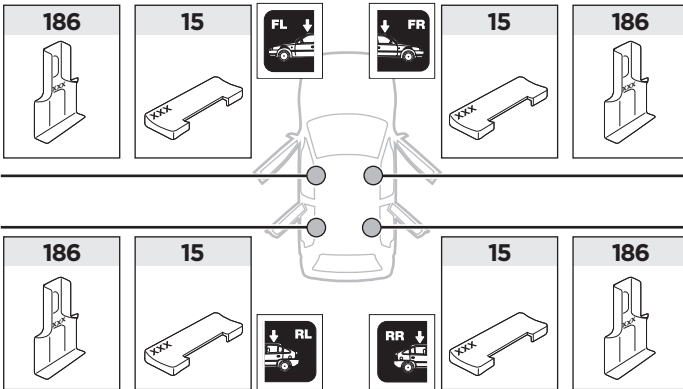

3

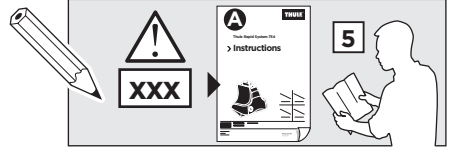

	W (mm)	Z (mm)	Y (mm)	W (inch)	Z (inch)	Y (inch)
ISUZU Big Horn , 3-dr SUV, 93-97	125	720	265	4 7/8	28 3/8	10 3/8
ISUZU Trooper , 3-dr SUV, 93-97	125	720	265	4 7/8	28 3/8	10 3/8
HOLDEN Jackaroo , 3-dr SUV, 93-97	125	720	265	4 7/8	28 3/8	10 3/8
OPEL Monterey , 3-dr SUV, 93-97	125	720	265	4 7/8	28 3/8	10 3/8
VAUXHALL Monterey , 3-dr SUV, 93-97	125	720	265	4 7/8	28 3/8	10 3/8

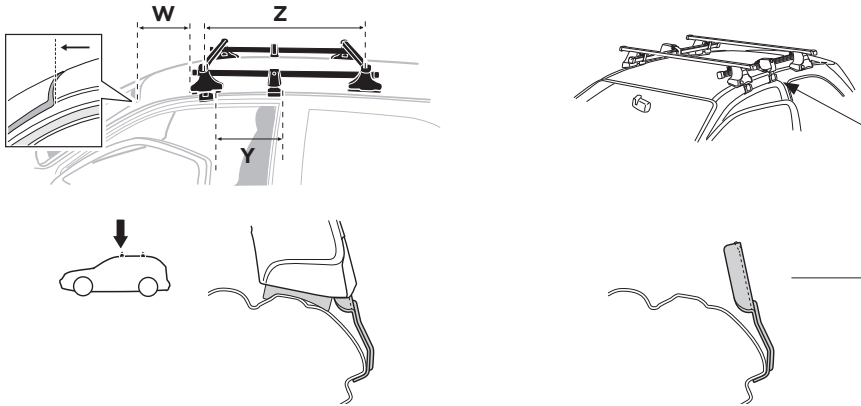

	W (mm)	Z (mm)	W (inch)	Z (inch)
ACURA SLX , 5-dr SUV, *96-99	365	736	14 3/8	29
ISUZU Big Horn , 5-dr SUV, 92-97	365	736	14 3/8	29
ISUZU Trooper , 5-dr SUV, 92-97 / *92-02	365	736	14 3/8	29
HOLDEN Jackaroo , 5-dr SUV, 92-97	365	736	14 3/8	29
OPEL Monterey , 5-dr SUV, 92-97	365	736	14 3/8	29
VAUXHALL Monterey , 5-dr SUV, 93-97	365	736	14 3/8	29

