





Thule Rapid System Kit 1266

> Instructions

SEAT Cordoba, 4-dr Sedan, 03-09

SEAT Ibiza, 3-dr Hatchback, 02-07

SEAT Ibiza, 5-dr Hatchback, 02-07

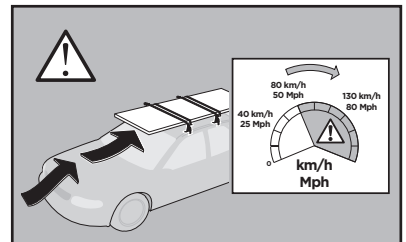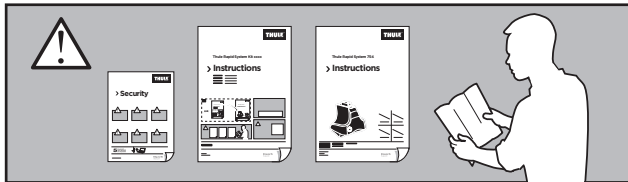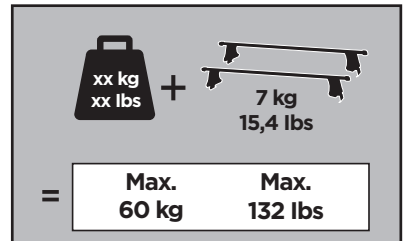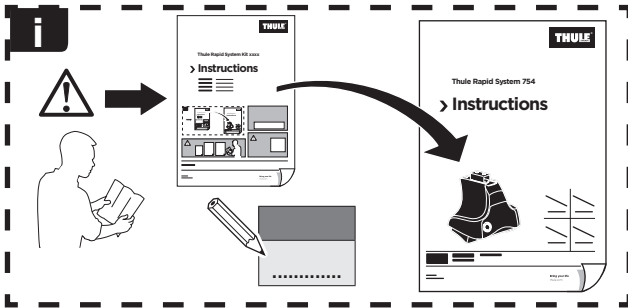






ISO 11154-E

141266


C.20130618
519-1266-02

Bring your life

thule.com

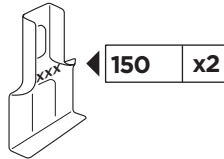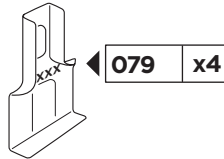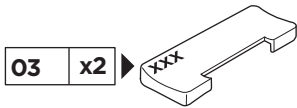



x1



x1



1

	X (scale)	X (mm)	X (inch)
SEAT Cordoba , 4-dr Sedan, 03-09	26,5	916	36 1/8
SEAT Ibiza , 3-dr Hatchback, 02-07	27	921	36 1/4
SEAT Ibiza , 5-dr Hatchback, 02-07	27	921	36 1/4

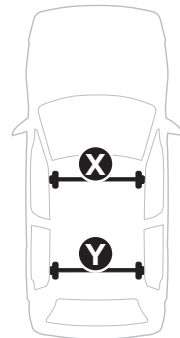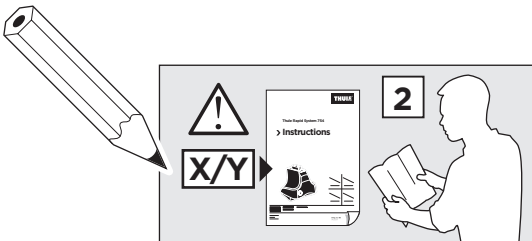


	Y (scale)	Y (mm)	Y (inch)
SEAT Cordoba , 4-dr Sedan, 03-09	25,5	906	35 5/8
SEAT Ibiza , 3-dr Hatchback, 02-07	25,5	906	35 5/8
SEAT Ibiza , 5-dr Hatchback, 02-07	25,5	906	35 5/8

2

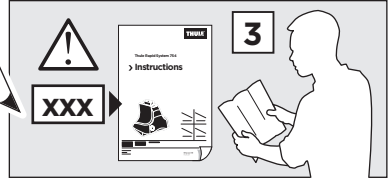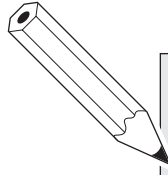


SEAT Ibiza, 3-dr Hatchback, 02-07

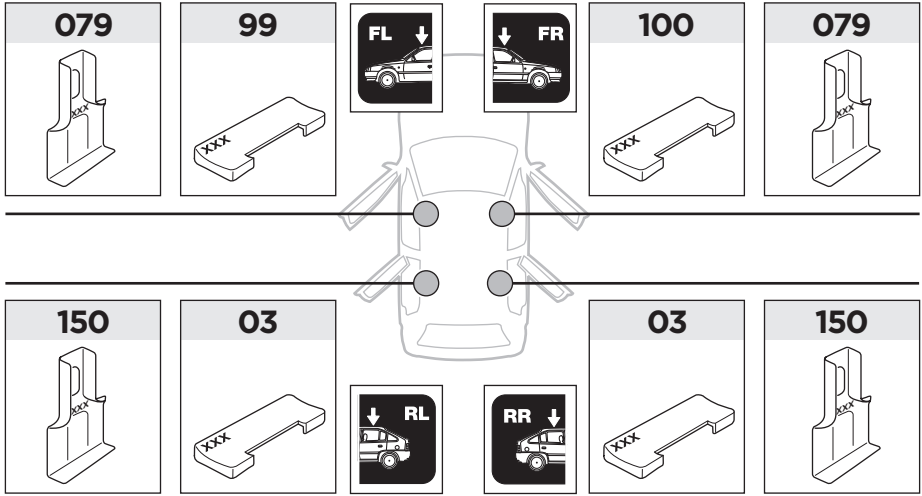


SEAT Cordoba, 4-dr Sedan, 03-09

SEAT Ibiza, 5-dr Hatchback, 02-07

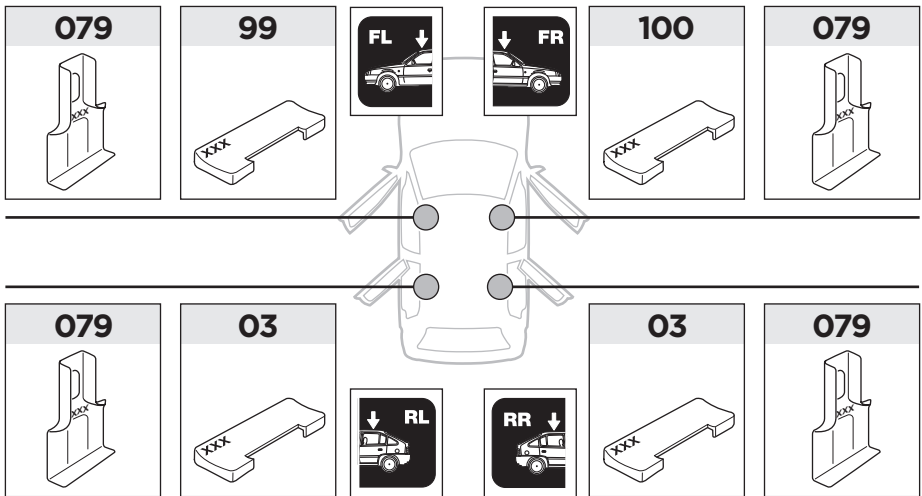

3

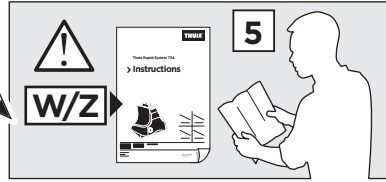

	W (mm)	Z (mm)	W (inch)	Z (inch)
SEAT Cordoba , 4-dr Sedan, 03-09	250	670	9 7/8	26 3/8
SEAT Ibiza , 3-dr Hatchback, 02-07	190	720	7 1/2	28 3/8
SEAT Ibiza , 5-dr Hatchback, 02-07	250	670	9 7/8	26 3/8

